



# Nostalgia Electrics PCM805 Extractor Head Replacement

This guide shows removing the extractor head.

Written By: Carlton




## INTRODUCTION

Use this guide to replace your extractor head if it is damaged.

## Step 1 — Bowl



 Make sure that the device is unplugged and has not been used recently because the extractor head and bowl can be very hot.

- Place the device on a steady table.
- Lift and remove the rim.

## Step 2



- Twist the bowl clockwise until it is free of the groove and lift to remove.

## Step 3 — Extractor Head



- Firmly grip the extractor head and slowly lift vertically to remove from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 08:28:45 PM.